


# Installation Instructions

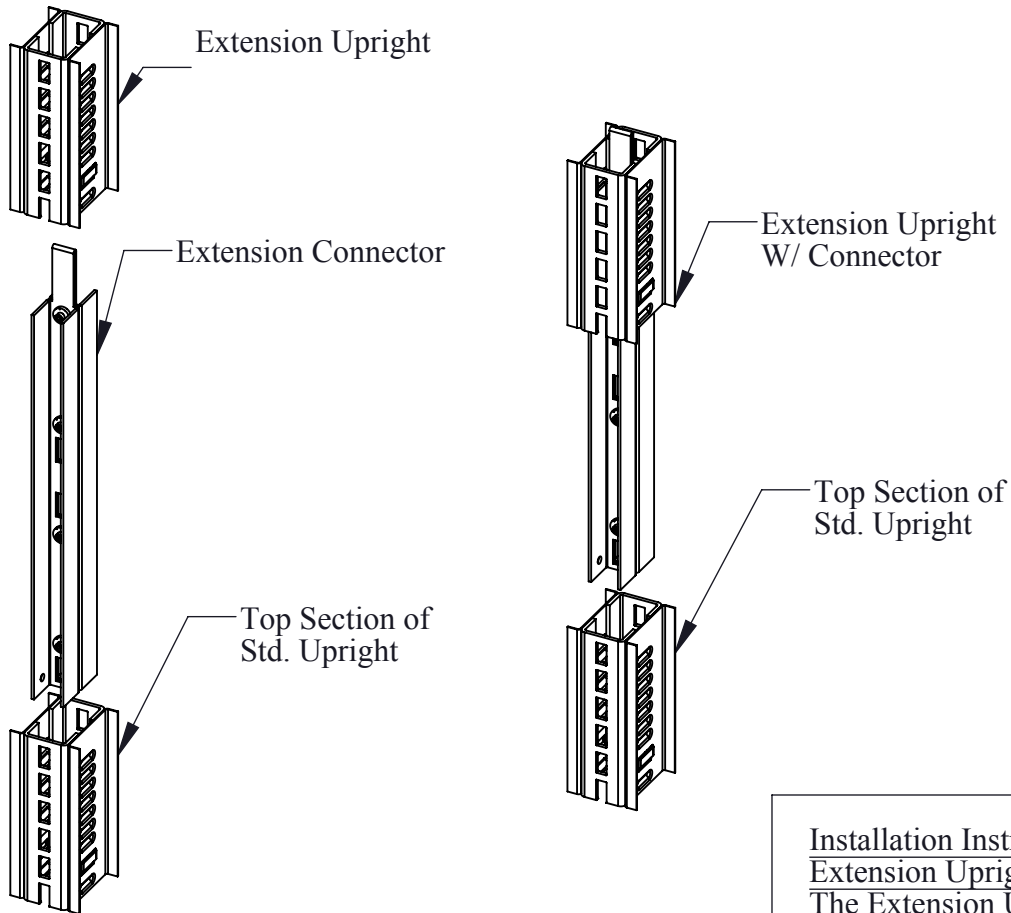

## Installation Instructions for Extension Upright Connectors

The Extension Upright will come unassembled.

- 1) First, place the Extension Connector into the Extension Upright as shown on page 2.
- 2) Using an Allen Hex Head Wrench turn the top two Socket Head Screws until the Extension Connector is tightly secure to the Extension Upright.
- 3) Slide the Extension Upright Connector into the top of the Upright so that the two Uprights are flush together.

# Installation Instructions

